

BLADEOS™ 6.6
BBI Quick Guide

RackSwitch™ G8052

Part Number: BMD00256, April 2011



2051 Mission College Blvd.
Santa Clara, CA 95054
www.bladenetwork.net

Copyright © 2011 BLADE Network Technologies, an IBM company, 2051 Mission College Blvd., Santa Clara, California, 95054, USA. All rights reserved. Part Number: BMD00256.

This document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this document may be reproduced in any form by any means without prior written authorization of BLADE Network Technologies. Documentation is provided “as is” without warranty of any kind, either express or implied, including any kind of implied or express warranty of non-infringement or the implied warranties of merchantability or fitness for a particular purpose.

U.S. Government End Users: This document is provided with a “commercial item” as defined by FAR 2.101 (Oct. 1995) and contains “commercial technical data” and “commercial software documentation” as those terms are used in FAR 12.211-12.212 (Oct. 1995). Government End Users are authorized to use this documentation only in accordance with those rights and restrictions set forth herein, consistent with FAR 12.211- 12.212 (Oct. 1995), DFARS 227.7202 (JUN 1995) and DFARS 252.227-7015 (Nov. 1995).

BLADE Network Technologies reserves the right to change any products described herein at any time, and without notice. BLADE Network Technologies assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by BLADE Network Technologies. The use and purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of BLADE Network Technologies.

BLADE Network Technologies, the BLADE logo, BLADEHarmony, BNT, NMotion, RackSwitch, Rackonomics, RackSwitch Solution Partner, ServerMobility, SmartConnect and VMready are trademarks of BLADE Network Technologies. All other names or marks are property of their respective owners.

Originated in the USA.

Contents

: Preface ■ 5

Who Should Use This Book ■ 5

Related Documentation ■ 5

Typographic Conventions ■ 6

How to Get Help ■ 7

Chapter 1: Getting Started ■ 9

Features ■ 9

Requirements ■ 9

Switch Set Up ■ 10

 IP Interfaces ■ 10

 Enabling/Disabling BBI Access ■ 10

Web Browser Set Up ■ 10

Starting the BBI ■ 11

Chapter 2: Browser-Based Interface Basics ■ 15

Toolbar ■ 16

 Context Tabs ■ 16

 Commands ■ 16

Navigation Window ■ 17

Forms Window ■ 18

Message Window ■ 18

Chapter 3: Configuring the Switch ■ 19

Configuration Steps ■ 19

 Using the BBI to Load Switch Software ■ 21

Chapter 4: Viewing Statistics ■ 25

Steps for Displaying Statistics ■ 25

Chapter 5: The Dashboard ■ 27

Steps for Displaying Dashboards ■ 27

Preface

The BLADEOS Browser-Based Interface (BBI) software is included with the RackSwitch G8052 (G8052). The BBI software lets you use your Web browser to access switch information and statistics, and to perform switch configuration via the Internet.

This *BBI Quick Guide* provides an overview of how to access and use the BLADEOS Browser-Based Interface.

Who Should Use This Book

This *BBI Quick Guide* is intended for network installers and system administrators engaged in configuring and maintaining a network. It assumes that you are familiar with your G8052, your Web browser, Ethernet concepts, IP addressing, the IEEE 802.1d Spanning Tree Protocol, and SNMP configuration parameters.

Related Documentation

For documentation on installing the switch physically, see the *Installation Guide* for your G8052.

For details about the switch information, statistics, and configuration parameters available using the BLADEOS BBI, see the BLADEOS *Command Reference* and *Application Guide*.

Typographic Conventions

The following table describes the typographic styles used in this book.

Table 1 Typographic Conventions

Typeface or Symbol	Meaning	Example
AaBbCc123	This type is used for names of commands, files, and directories used within the text. It also depicts on-screen computer output and prompts.	View the <code>readme.txt</code> file. Main#
AaBbCc123	This bold type appears in command examples. It shows text that must be typed in exactly as shown.	Main# sys
<AaBbCc123 >	This italicized type appears in command examples as a parameter placeholder. Replace the indicated text with the appropriate real name or value when using the command. Do not type the brackets. This also shows book titles, special terms, or words to be emphasized.	To establish a Telnet session, enter: host# telnet <IP address> Read your <i>User's Guide</i> thoroughly.
[]	Command items shown inside brackets are optional and can be used or excluded as the situation demands. Do not type the brackets.	host# ls [-a]

How to Get Help

If you need help, service, or technical assistance, call BLADE Network Technologies Technical Support:

US toll free calls: 1-800-414-5268

International calls: 1-408-834-7871

You also can visit our web site at the following address:

<http://www.bladenetwork.net>

Click the **Support** tab.

The warranty card received with your product provides details for contacting a customer support representative. If you are unable to locate this information, please contact your reseller. Before you call, prepare the following information:

- Serial number of the switch unit
- Software release version number
- Brief description of the problem and the steps you have already taken
- Technical support dump information (`# show tech-support`)

CHAPTER 1

Getting Started

This chapter briefly describes the software features and requirements for the BLADEOS Browser-Based Interface (BBI), and explains how to access the BBI start page.

Features

The network administrator can access switch configuration and monitoring functions through the BBI, a Web-based switch management interface. The BBI has the following features:

- Many of the same configuration and monitoring functions as the command-line interface
- Intuitive and easy-to-use interface structure
- Password protection
- Nothing to install; the BBI is part of the BLADEOS switch software
- Automatically upgraded with each new software release

Note – You can perform most configuration and monitoring tasks through the BBI. For a comprehensive set of commands, use the command-line interface. Refer to the BLADEOS *Command Reference* for the RackSwitch G8052.

Requirements

- RackSwitch G8052 switch
- Installed BLADEOS switch software
- PC or workstation with network access to the switch

- Frame-capable Web-browser software, such as the following:
 - Netscape Navigator 4.7x or higher
 - Internet Explorer 6.0x or higher
 - Mozilla FireFox 1.0.4 or higher
- JavaScript enabled in your Web browser

Switch Set Up

Before you can access the BBI, minimal configuration is required on the G8052.

IP Interfaces

At least one IP interface must be configured on the switch. Each IP interface address provides a point of access for BLADEOS switch management. The default management interface is 1, which allows access to BLADEOS switch management.

For complete information about configuring IP interfaces, see your *G8052 Installation Guide*.

Enabling/Disabling BBI Access

By default, BBI access is enabled. If you need to disable or re-enable access, use the following command from the command-line interface:

```
RS G8052 (config)# [no] access http enable
```

For more information on the accessing and configuring the switch through the command-line interface, see your *Command Reference*.

Web Browser Set Up

Most modern Web browsers work with frames and JavaScript by default, and require no additional set up. However, you should check your Web browser's features and configuration to make sure frames and JavaScript are enabled.

Note – JavaScript is not the same as Java. Please make sure that JavaScript is enabled in your Web browser.


Starting the BBI

When the switch and browser set up is done, follow these steps to launch the BBI:


1. Start your Web browser.
2. Enter the switch IP interface address in the Web browser's URL field.

For example, consider an IP interface with a network IP address of 10.0.0.1

You could enter the following:

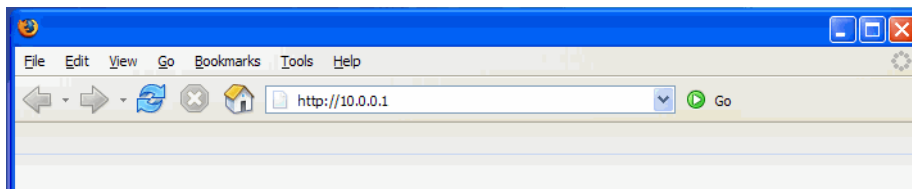

If the IP interface's address has a name on your local domain name server, you could enter the name instead. For example, you could enter the following:

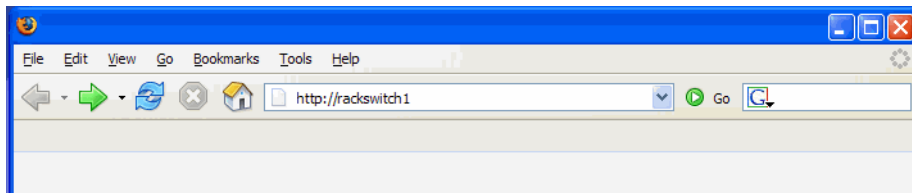

3. Log in to the switch.

If your switch and browser are properly configured, you are asked to enter a password:



Enter the account name and password for the switch's administrator or user account. The default account name is *admin*, and the default password is *admin*. For more password information, see your *Command Reference*.

4. Allow the BBI Dashboard page to load.

When the proper account name and password combination is entered, the BBI Dashboard page is displayed in your browser's viewing area. There may be a slight delay while the Dashboard page is being initialized. You should not stop the browser while loading is in progress. When loading is complete, a folder icon appears in the left-hand navigation window.

The screenshot shows a web browser window displaying the BLADE OS interface. The main content area is titled "Switch Dashboard" and contains a table of system information for a "RackSwitch G8052". The table includes fields for Switch Name, Location, Type, Up Time, Last Boot Time, Timezone, Daylight Savings, MAC Address, IP Address, Hardware Revision, Serial Number, Spare Part Number, Manufacturing Date, Software Revision, Flash Configuration, Unit Fans Status, Unit Temperature, Unit Fans Speed, Unit Power Supplies, Banner, Service Required LED, Operational Status, and USB mounted & ready. A "Submit" button is located at the bottom right of the table.

Switch Name	G8052B
Switch Location	
Switch Type	Blade Network Technologies RackSwitch G8052
Switch Up Time	9 days, 0 hours, 14 minutes and 7 seconds.
Last Boot Time	22:30:00 Mon Nov 13, 2011 (reset by WEB-UI)
Time and date	22:44:21 , 11/22/2011
Timezone Location	Americas-USA-PacificTime
Daylight Savings Time Status	disabled
MAC Address	fc:cf:62:5e:a9:00
IP Address	10.0.0.1
Hardware Revision	9
Switch Serial No	35US5017001G
HW Spare Part No	BAC-00069-00
Manufacturing Date	10/20
Software Rev	6.6.0(FLASH image1)
Flash Configuration	FLASH image1, active configuration.
Unit Fans Status	Fans are in Front-To-Back AirFlow, Warning at 60 C and Recover at 80 C
Unit Temperature	Sensor 1: 37.5; Sensor 2: 38.5; Sensor 3: 42.75; Sensor 4: 46.00; Sensor 5: 45.00; Sensor 6: 47.0; Sensor 7: 47.0; Sensor 8: 47.0; Sensor 9: 48.0; Sensor 10: 45.0; Sensor 11: 50.0;
Unit Fans Speed	Fan 1: 9278 RPM (25 PWM); Fan 2: 4173 RPM (25 PWM); Fan 3: 0 RPM (25 PWM); Fan 4: 0 RPM (25 PWM); Fan 5: 8896 RPM (25 PWM); Fan 6: 4044 RPM (25 PWM); Fan 7: 9262 RPM (25 PWM); Fan 8: 4137 RPM (25 PWM);
Unit Power Supplies	Power Supply 1: Off, Power Supply 2: On
Banner	
Service Required LED	Enabled
	Operational Status <input type="text" value="Normal"/>
USB mounted & ready	NO

Note – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of switch unit that you are using and the firmware versions and options that are installed.

CHAPTER 2

Browser-Based Interface Basics

Once you are properly logged in, the BLADEOS Browser-Based Interface (BBI) appears in your Web browser's viewing window:

The screenshot displays the BLADE OS interface for a RackSwitch G8052. The interface includes a toolbar with tabs for CONFIGURE, STATISTICS, and DASHBOARD. The DASHBOARD tab is active, showing a 'Switch Dashboard' with various system parameters. A navigation window on the left shows the current location as 'BNT RackSwitch G8052'. A message window is visible at the top right. The main content area contains a table of system information and a 'Submit' button.

Switch Dashboard	
Switch Name	G8052B
Switch Location	
Switch Type	Blade Network Technologies RackSwitch G8052
Switch Up Time	9 days, 0 hours, 14 minutes and 7 seconds.
Last Boot Time	22:30:00 Mon Nov 13, 2011 (reset by WEB-UI)
Time and date	22:44:21 , 11/22/2011
Timezone Location	Americas-USA-PacificTime
Daylight Savings Time Status	disabled
MAC Address	fc:cf:62:5e:a9:00
IP Address	10.0.0.1
Hardware Revision	9
Switch Serial No	35US5017001G
HW Spare Part No	BAC-00069-00
Manufacturing Date	10/20
Software Rev	6.6.0(FLASH image1)
Flash Configuration	FLASH image1, active configuration.
Unit Fans Status	Fans are in Front-To-Back AirFlow, Warning at 60 C and Recover at 80 C
Unit Temperature	Sensor 1: 37.5; Sensor 2: 38.5; Sensor 3: 42.75; Sensor 4: 46.00; Sensor 5: 45.00; Sensor 6: 47.0; Sensor 7: 47.0; Sensor 8: 47.0; Sensor 9: 48.0; Sensor 10: 45.0; Sensor 11: 50.0;
Unit Fans Speed	Fan 1: 9278 RPM (25 PWM); Fan 2: 4173 RPM (25 PWM); Fan 3: 0 RPM (25 PWM); Fan 4: 0 RPM (25 PWM); Fan 5: 8896 RPM (25 PWM); Fan 6: 4044 RPM (25 PWM); Fan 7: 9262 RPM (25 PWM); Fan 8: 4137 RPM (25 PWM);
Unit Power Supplies	Power Supply 1: Off , Power Supply 2: On
Banner	
Service Required LED	Enabled
Operational Status	Normal
USB mounted & ready	NO

Submit

There are four main regions on the BLADEOS BBI screen:

- The toolbar is used for selecting the context for your actions in the other windows.
- The navigation window is used for selecting particular items or features to act upon.
- The forms window is used for viewing or altering switch information.
- The message window is used for displaying the most recent switch `syslog` messages and events.

Toolbar

Context Tabs

The toolbar is used for setting the context for your actions in the application. There are three context tabs:

Configure	When selected, you can access the switch configuration forms. Configuration forms can be altered only if you are logged in using the administrator account. Select an item in the navigation window to display the desired configuration form in the forms window.
Statistics	When selected, you can view information about switch performance. Select an item in the navigation window to display the desired statistics in the forms window.
Dashboard	This context tab is selected by default when the BBI is first activated. When selected, basic switch information and status can be viewed in the forms window. Select an item in the navigation window to display the desired dashboard information in the forms window.

The selected context tab is highlighted, to remind you of the current context mode.

Commands

The following general commands are available on the toolbar:


Save to Active Config	Saves the current configuration to the startup configuration block.
Save to Backup Config	Saves the current configuration to the backup configuration block.
Show Config	Opens a new Web-browser window that displays the running configuration.

Show Log	Opens a new Web-browser window that displays the most recent switch log messages. Close the log browser when finished.
Help	Opens a new Web-browser window that displays basic online help information. Close the Help browser when finished.
Logout	Log off the switch and exit the BBI.

Navigation Window

The navigation window is used for selecting a particular switch feature to act upon. Status, statistics, or configuration forms for the selected item will appear in the forms window, depending on the context chosen on the toolbar.

The navigation window contains a tree of folders, sub-folders, and feature icons:

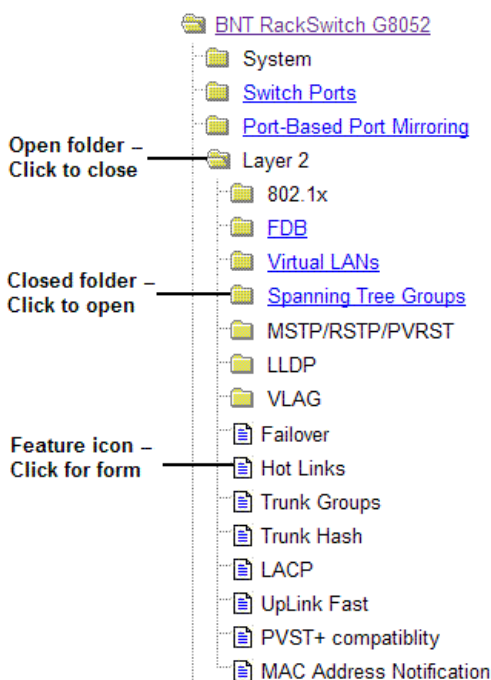

You can click on any closed folder to open it and reveal its contents. Click on any open folder to close it. Click on any feature icon to load the appropriate status, statistics, or configuration form in the forms window.

Some folders also have forms. If the name of the folders is underlined, click on the name to display the appropriate form.

Forms Window

When a feature icon is selected on the navigation window, a status, statistics, or configuration form is displayed in the forms window. The exact nature of the form depends on the current context selected on the toolbar, as well as the type of information available. Not all feature icons have forms for all contexts.

Some forms display switch information such as settings, status, or statistics. Others allow you to make configuration changes to switch parameters.

Message Window

Switch log messages are generated by events such as login/logout activity, password changes, configuration changes, and switch reboot. The BBI records the most recent messages and displays each one briefly in the message window. When the last message has been displayed, the cycle is repeated.

To view all messages at the same time, select the Show Log command on the toolbar. A new Web-browser window will be opened to display the log information. Close the window when finished.

CHAPTER 3

Configuring the Switch

The BLADEOS Browser-Based Interface (BBI) can be used to view and change switch configuration parameters. The same configuration parameters that are available through the switch's command-line interface are present on the BBI configuration forms.


The following provides a basic outline for switch configuration. You should first be familiar with configuration as covered in the BLADEOS *Command Reference* manual.

Note – You must be logged in using the administrator account in order to change switch configuration settings.


Configuration Steps

Follow these basic steps for viewing or configuring switch parameters:

1. Click the Configure context tab in the BLADEOS toolbar:

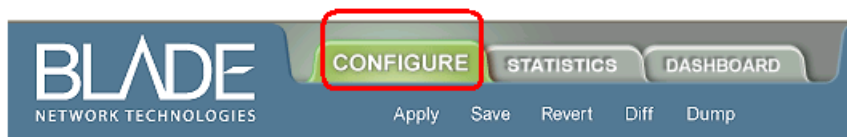

2. Select a feature icon in the navigation window. For example:

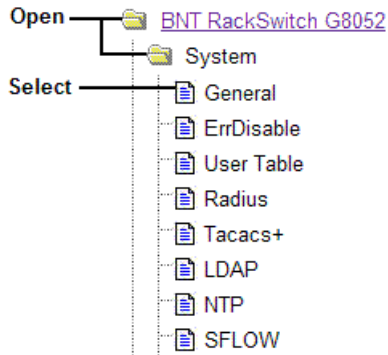

3. View or make changes to the settings shown in the forms window. For example:

The screenshot shows the BLADE OS configuration interface. The top navigation bar includes 'CONFIGURE', 'STATISTICS', and 'DASHBOARD'. Below the navigation bar are buttons for 'Apply', 'Save', 'Revert', 'Diff', 'Dump', 'Show Log', 'Help', and 'Logout'. The main content area is titled 'Switch Management Processor Configuration' and contains a table of settings. A red box highlights the 'Enable/Disable Host Name' dropdown menu, which is currently set to 'Disabled'.

Setting	Value
Switch IP Address	10.0.0.1
Switch IP Subnet Mask	255.255.0.0
Enable/Disable DHCP for Interface 1	Enabled
Enable/Disable Console output of syslog messages	Enabled
Enable/Disable Host Name	Disabled
Syslog Host IP Address	Enabled
Severity of Syslog Host	log debug 7
Facility of Syslog Host	local 0
Second Syslog Host IP Address	0.0.0.0
Severity of Second Syslog Host	log debug 7
Facility of Second Syslog Host	local 0

Note – Fields which must be configured for proper switch operations are highlighted on the forms in GREEN type. Items which load other forms when selected are underlined.

4. Click the Submit button on the bottom of the form to submit the form contents to the switch.


Using the BBI to Load Switch Software

You can use the Browser-Based Interface to load software onto the G8052. The software image to load can reside in one of the following locations:


- FTP server
- TFTP server
- Local computer

After you log onto the BBI, perform the following steps to load a software image:

1. Click the Configure context tab in the BLADEOS toolbar:

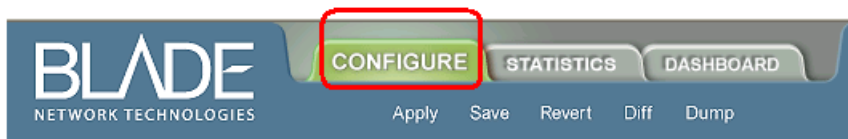

2. In the Navigation Window, select System > Config/Image Control.

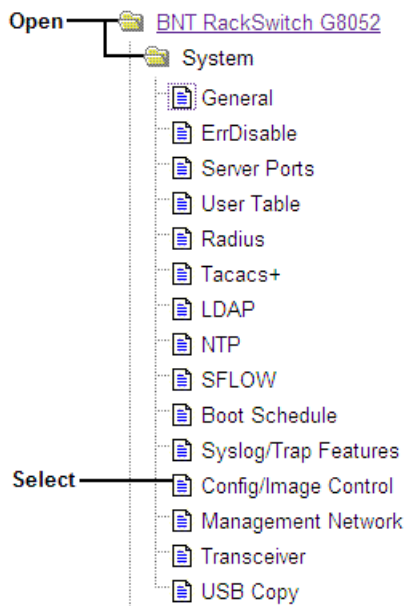

The Switch Image and Configuration Management page appears.

Switch Image and Configuration Management	
Image 1 Version	version 6.6.0 , downloaded 22:28:09 Mon Nov 13, 2011 NormalPanel
Image 2 Version	version 6.3.2 , downloaded 8:28:17 Sun May 14, 2011 NormalPanel
Boot Version	version 6.6.0
Active Image Version	6.6.0
Next Boot Image Selection	image 1 ▾
Active Configuration Block	active config
Next Boot Configuration Block Selection	active config ▾
Next CLI Boot Mode Selection	BLADEOS CLI ▾
Prompt for selectable boot mode	ENABLE ▾
NetBoot	
NetConfig for next boot	DISABLE ▾
TFTP IP Address	0.0.0.0
Config file	
USB Boot	
Capability	DISABLE ▾
FTP/TFTP Settings	
Hostname or IP Address of FTP/TFTP server	100.10.20.1
Username for FTP Server or Blank for TFTP Server	
Password for FTP Server	
Image Settings	
Image for Transfer	image 1 ▾
Image Filename (on server)	6.6.0_os.img <input type="button" value="Get Image"/> <input type="button" value="Put Image"/>
Image Filename (on HTTP Client)	<input type="button" value="Browse..."/> <input type="button" value="Download via Browser"/>


- If you are loading software from your computer (HTTP client), go to Step 4. If you are loading software from a FTP/TFTP server, enter the server's information in the FTP/TFTP Settings section.

FTP/TFTP Settings	
Hostname or IP Address of FTP/TFTP server	100.20.10.1
Username for FTP Server or Blank for TFTP Server	
Password for FTP Server	

4. In the Image Settings section, select the image version you want to replace (Image for Transfer).

Image Settings	
Image for Transfer	image 1 ▾
Image Filename (on server)	6.6.0_os.img <input type="button" value="Get Image"/> <input type="button" value="Put Image"/>
Image Filename (on HTTP Client)	<input type="button" value="Browse..."/> <input type="button" value="Download via Browser"/>

- If you are loading software from a FTP/TFTP server, enter the file name and click Get Image.
- If you are loading software from your computer, click Browse. In the File Download Dialog, select the file and click OK. Click Download via Browser.

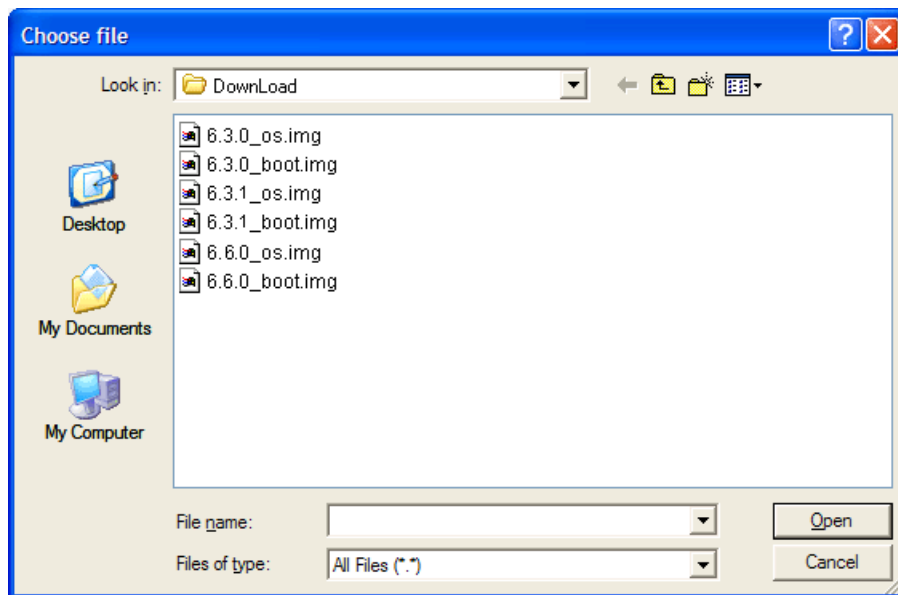

Once the image has loaded, the page refreshes to show the new software.

CHAPTER 4

Viewing Statistics


The BLADEOS Browser-Based Interface (BBI) can be used to view a variety of switch performance statistics. The same statistics that are available through the switch's command-line interface are present on the BBI statistics forms.

The following provides a basic outline for viewing statistics. You should first be familiar with available statistics as covered in the BLADEOS *Command Reference* manual.


Steps for Displaying Statistics

Follow these basic steps for viewing switch statistics:

1. Select the Statistics context tab in the BLADEOS toolbar:

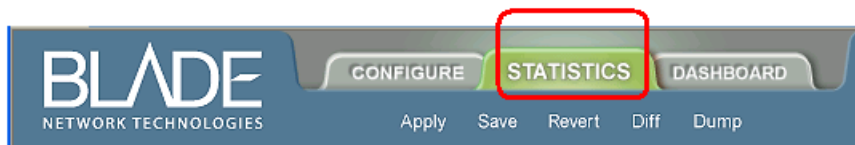

2. Select a feature icon or underlined folder in the navigation window. For example:

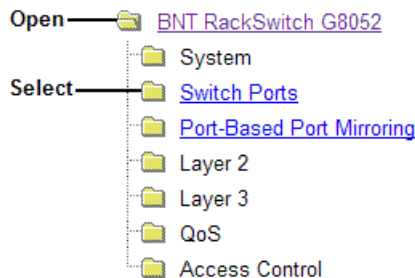

3. View the statistics in the forms window. For example:

The screenshot shows the BLADE OS web interface. The top navigation bar includes 'CONFIGURE', 'STATISTICS' (selected), and 'DASHBOARD'. Below the navigation bar, there are buttons for 'Apply', 'Save', 'Revert', 'Diff', and 'Dump', along with 'Show Log', 'Help', and 'Logout'. A status bar at the top displays the date and time '7. Mar 2 4:00:19' and a log message: '192.168.1.211 NOTICE mgmt admin(admin) login on Console'.

The main content area is titled 'Switch Ports Statistics Summary' and displays a table with the following data:

Switch Port	InOctets	OutOctets	Total Errors
1	0	0	0
2	49748542	3331325	0
3	0	0	0
4	0	0	0
5	0	0	0
6	0	0	0
7	0	0	0
8	0	0	0
9	0	0	0
10	0	0	0
11	0	0	0
12	0	0	0

The left sidebar shows a tree view of the configuration hierarchy for 'BNT RackSwitch G8052', including folders for 'System', 'Switch Ports', 'Port-Based Port Mirroring', 'Layer 2', 'Layer 3', 'QoS', and 'Access Control'. The 'Switch Ports' folder is currently selected.

Note – Items which load other forms when selected are [underlined](#).

CHAPTER 5

The Dashboard


The BLADEOS Browser-Based Interface (BBI) can be used to view the present settings and operating status of a variety of switch features. The same information available through the switch's command-line interface is present on the dashboard forms.

The following provides a basic outline for viewing the dashboard forms. You should first be familiar with configuration as covered in the BLADEOS *Command Reference* manual.


Steps for Displaying Dashboards

Follow these basic steps for viewing switch dashboard forms:

1. Select the Dashboard context tab in the BBI toolbar:

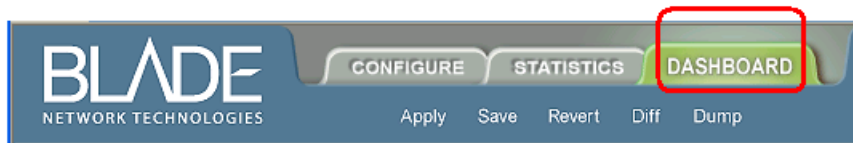

2. Select a feature icon in the navigation window. For example:

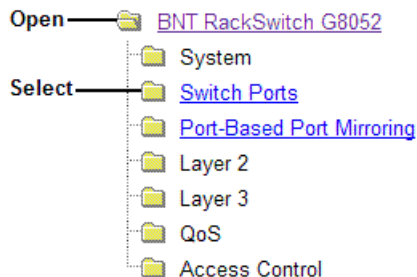

3. View information shown in the forms window. For example:

The screenshot shows the BLADE OS interface with the following elements:

- Navigation:** CONFIGURE, STATISTICS, DASHBOARD (selected), and BLADE OS.
- System Info:** Apply, Save, Revert, Diff, Dump, Show Log, Help, Logout.
- Alerts:** 14. May 18 16:29:03 192.168.49.50 NOTICE link: link up on port 2
- Left Menu:** BNT RackSwitch G8052, System, Switch Ports, Port-Based Port Mirroring, Layer 2, RMON Menu, Layer 3, QoS, Access Control, Virtualization.
- Switch Ports Dashboard Table:**

Status	Switch Port Info	Operational Status	Speed Duplex FlowCtl	Input Frames Output Frames	LinkState Changes Total Errors
	1 : name: stp: DSB ext stp guard: no rmon: disabled ErrDisable Recovery: disabled Link Flap Dampening: disabled Flood Blocking: disabled FDB Learning: enabled Tagging: disabled PVID: 1 VLANs:1 DHCP Snooping Trusted/Untrusted: Untrusted DHCP Snooping Limit Rate: 0	operational	ANY/Both/None	0 0	0 0
	2 : name: stp: DSB ext stp guard: no rmon: disabled ErrDisable Recovery: disabled Link Flap Dampening: disabled Flood Blocking: disabled FDB Learning: enabled Tagging: disabled PVID: 1 VLANs:1 DHCP Snooping Trusted/Untrusted: Untrusted DHCP Snooping Limit Rate: 0	operational	ANY/Both/None	0 0	0 0
	3 : name: stp: DSB ext stp guard: no rmon: disabled ErrDisable Recovery: disabled Link Flap Dampening: disabled Flood Blocking: disabled FDB Learning: enabled Tagging: disabled PVID: 1 VLANs:1 DHCP Snooping Trusted/Untrusted: Untrusted DHCP Snooping Limit Rate: 0	operational	ANY/Both/None	0 0	0 0

Note – Items which load other forms when selected are [underlined](#).