

BLADEOS™ 6.5 Release Notes

1/10Gb Uplink Ethernet Switch Module for
IBM BladeCenter®

Part Number: BMD00229, November 2010

BLADE
NETWORK TECHNOLOGIES

2051 Mission College Blvd.
Santa Clara, CA 95054
www.bladenetwork.net

Copyright © 2010 BLADE Network Technologies, Inc., 2051 Mission College Blvd. Santa Clara, California, 95054, USA. All rights reserved. Reference number: BMD00229

This document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this document may be reproduced in any form by any means without prior written authorization of BLADE Network Technologies, Inc. Documentation is provided “as is” without warranty of any kind, either express or implied, including any kind of implied or express warranty of non-infringement or the implied warranties of merchantability or fitness for a particular purpose.

U.S. Government End Users: This document is provided with a “commercial item” as defined by FAR 2.101 (Oct. 1995) and contains “commercial technical data” and “commercial software documentation” as those terms are used in FAR 12.211-12.212 (Oct. 1995). Government End Users are authorized to use this documentation only in accordance with those rights and restrictions set forth herein, consistent with FAR 12.211- 12.212 (Oct. 1995), DFARS 227.7202 (JUN 1995) and DFARS 252.227-7015 (Nov. 1995).

BLADE Network Technologies, Inc. reserves the right to change any products described herein at any time, and without notice. BLADE Network Technologies, Inc. assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by BLADE Network Technologies, Inc. The use and purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of BLADE Network Technologies, Inc.

BLADE Network Technologies, the BLADE logo, BLADEOS, BLADEHarmony, BNT, NMotion, RackSwitch, Rackonomics, RackSwitch Solution Partner, ServerMobility, SmartConnect and VMready are trademarks of BLADE Network Technologies, Inc. in the United States and certain other countries. Cisco[®] and EtherChannel[®] are registered trademarks of Cisco Systems, Inc. in the United States and certain other countries. VMware is a registered trademark or trademark of VMware, Inc. in the United States and/or other jurisdictions. Any other trademarks appearing in this manual are owned by their respective companies.

Originated in the USA.

Release Notes

The 1/10Gb Uplink Ethernet Switch Module (GbESM) is one of up to four switch modules that can be installed in the IBM BladeCenter chassis.

These release notes provide the latest information regarding BLADEOS 6.5 for the 1/10Gb Uplink ESM (referred to as GbESM throughout this document).

This supplement modifies information found in the complete documentation:

- *BLADEOS 6.5 Application Guide* for the 1/10Gb Uplink Ethernet Switch Module for IBM BladeCenter
- *BLADEOS 6.5 Command Reference* for the 1/10Gb Uplink Ethernet Switch Module for IBM BladeCenter
- *BLADEOS 6.5 ISCLI Reference* for the 1/10Gb Uplink Ethernet Switch Module for IBM BladeCenter
- *BLADEOS 6.5 BBI Quick Guide* for the 1/10Gb Uplink Ethernet Switch Module for IBM BladeCenter
- 1/10Gb Uplink Ethernet Switch Module for IBM BladeCenter, *Installation Guide*

The publications listed above are available from the IBM support website:


<http://www.ibm.com/systems/support>

Please keep these release notes with your product manuals.

Hardware Support

BLADEOS 6.5 software is supported only on the 1/10Gb Uplink Ethernet Switch Module for IBM BladeCenter. The 1/10Gb Uplink ESM (GbESM) shown in [Figure 1](#) is a high performance Layer 2-3 embedded network switch that features tight integration with IBM BladeCenter management modules.

Figure 1 1/10Gb Uplink ESM Faceplate

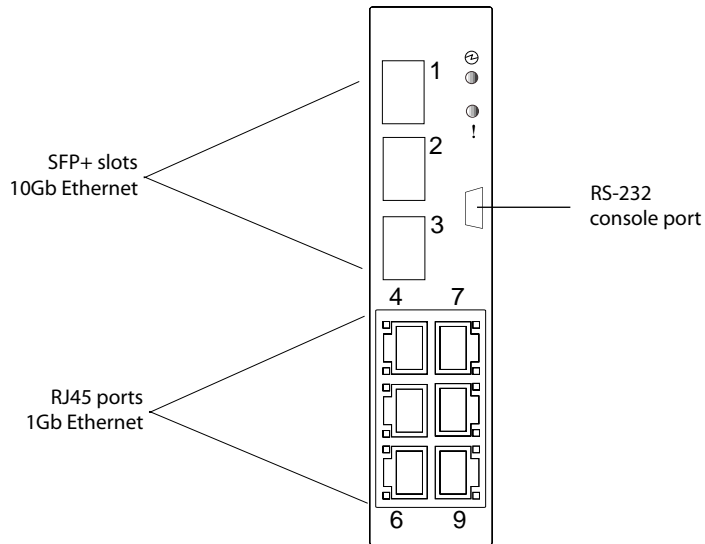

The GbESM has the following port capacities:

- Three external 10Gb SFP+ slots
- Six external 1Gb Ethernet ports (RJ45)
- One RS-232 serial console port
- Two 100Mb internal management ports
- Fourteen 1000Mb Ethernet internal ports

Updating the Switch Software Image

The switch software image is the executable code running on the GbESM. A version of the image comes pre-installed on the device. As new versions of the image are released, you can upgrade the software running on your switch. To get the latest version of software supported for your GbESM, go to the following website:

<http://www.ibm.com/systems/support>

To determine the software version currently used on the switch, use the following switch command:

```
>> # /boot/cur
```

The typical upgrade process for the software image consists of the following steps:

- Load a new software image and boot image onto an FTP or TFTP server on your network.
- Transfer the new images to your switch.
- Specify the new software image as the one which will be loaded into switch memory the next time a switch reset occurs.
- Reset the switch.

For instructions on the typical upgrade process using the CLI, ISCLI, or BBI, see [“Loading New Software to Your Switch” on page 7..](#)



Caution—Although the typical upgrade process is all that is necessary in most cases, upgrading from (or reverting to) some versions of BLADEOS requires special steps prior to or after the software installation process. Please be sure to follow all applicable instructions in the following sections to ensure that your switch continues to operate as expected after installing new software.

Special Software Update Issues

When updating to BLADEOS 6.5, the following special conditions may apply, depending on the version of software currently installed on your switch. Please note that these conditions are cumulative: If updating from version 2.0 (for example), follow the recommendations in order, beginning with those for 2.0, and then all that that apply, such as for “3.0 and prior,” “4.0 and prior,” and so on.

Updating from BLADEOS 5.x or Prior

After updating:

- The STG port priority value is different compared to release 5.x and prior. In release 5.x and prior, the priority value could be set to any integer from 0 to 255. In release 6.3 and later, the range is still 0 to 255, but must be specified in increments of 4 (such as 0, 4, 8, 12, and so on). If the specified value is not evenly divisible by 4, the value will be automatically rounded down to the nearest valid increment whenever manually changing the priority value, when loading a configuration from prior to release 6.3, and during the software upgrade process. If using STG port priorities, after upgrading to release 6.3 or later, it is recommended that the administrator review the configured values and make any appropriate changes. (ID: 38556)
- The default for the Layer-3 hash is different compared to release 5.x and prior. In release 5.x, the source IP address (SIP) was the default used to generate the Layer-3 hash. In release 6.3 and above, source and destination IP addresses (SIP-DIP) are used as the default. (ID: 39733)
- Some time zones are different compared to release 5.x and prior. After upgrading to release 6.3 or above, it is recommended that the administrator review the configured time zone and make any appropriate changes. (ID:29778)

Updating from BLADEOS 6.1 or Prior



Caution—If currently using BLADEOS 6.1 or prior, do not upgrade directly to BLADEOS 6.5. To do so could cause the upgrade to fail. If the switch does not boot after an upgrade attempt, see [“Recovering from a Failed Upgrade” on page 18](#).

The BLADEOS 6.5 software image is not compatible with earlier BLADEOS 6.1 image storage buffers. When updating from BLADEOS 6.1 or prior, first install and boot BLADEOS 6.3 (instead of BLADEOS 6.5).

Booting with BLADEOS 6.3 will prepare switch for the expanded BLADEOS 6.5 image file. The switch can then be upgraded to BLADEOS 6.5 using the regular update procedures.

After updating:

- Some time zones are different compared to release 6.1.2 and prior. After upgrading to release 6.3 or later, it is recommended that the administrator review the configured time zone and make any appropriate changes. (ID: 29778)

Updating from BLADEOS 6.x or Prior

After updating:

- The default value for port flow control for external uplink ports was changed in release 6.5.2. After upgrading to release 6.5.2 or later, it is recommended that the administrator review the configured flow control settings and make any appropriate changes. (ID: 43781)

Loading New Software to Your Switch

The GbESM can store up to two different switch software images (called `image1` and `image2`) as well as special boot software (called `boot`). When you load new software, you must specify where it should be placed: either into `image1`, `image2`, or `boot`.

For example, if your active image is currently loaded into `image1`, you would probably load the new image software into `image2`. This lets you test the new software and reload the original active image (stored in `image1`), if needed.



Caution—When you upgrade the switch software image, always load the new boot image and the new software image before you reset the switch. If you do not load a new boot image, your switch might not boot properly (To recover, see [“Recovering from a Failed Upgrade” on page 18](#)).

To load a new software image to your switch, you will need the following:

- The image and boot software loaded on an FTP or TFTP server on your network. For example:
 - Boot file: `GbESM-1-10U-6.5.2.0_Boot.img`
 - Image file: `GbESM-1-10U-6.5.2.0_OS.img`
- The hostname or IP address of the FTP or TFTP server
 - Note:** Be sure to download both the new boot file and the new image file.
- The name of the new software image or boot file

When the software requirements are met, use one of the following procedures to download the new software to your switch. You can use the BLADEOS CLI, the ISCLI, or the BBI to download and activate new software.

Loading Software via the BLADEOS CLI

1. Enter the following Boot Options command:

```
>> # /boot/gtimg
```

2. Enter the name of the switch software to be replaced:

```
Enter name of switch software image to be replaced
["image1"/"image2"/"boot"]: <image>
```

3. Enter the hostname or IP address of the FTP or TFTP server.

```
Enter hostname or IP address of FTP/TFTP server: <hostname or IP address>
```

4. Enter the name of the new software file on the server.

```
Enter name of file on FTP/TFTP server: <filename>
```

The exact form of the name will vary by server. However, the file location is normally relative to the FTP or TFTP directory (usually /tftpboot).

5. Enter your username for the server, if applicable.

```
Enter username for FTP server or hit return for
TFTP server: {<username>|<Enter>}
```

If entering an FTP server username, you will also be prompted for the password. The system then prompts you to confirm your request. Once confirmed, the software will load into the switch.

6. If software is loaded into a different image than the one most recently booted, the system will prompt you whether you wish to run the new image at next boot. Otherwise, you can enter the following command at the Boot Options# prompt:

```
Boot Options# image
```

The system then informs you of which software image (image1 or image2) is currently set to be loaded at the next reset, and prompts you to enter a new choice:

```
Currently set to use switch software "image1" on next reset.
Specify new image to use on next reset ["image1"/"image2"]:
```

Specify the image that contains the newly loaded software.

7. Reboot the switch to run the new software:

```
Boot Options# reset
```

The system prompts you to confirm your request. Once confirmed, the switch will reboot to use the new software.

Loading Software via the ISCLI

1. In Privileged EXEC mode, enter the following command:

```
Router# copy {tftp|ftp} {image1|image2|boot-image}
```

2. Enter the hostname or IP address of the FTP or TFTP server.

```
Address or name of remote host: <name or IP address>
```

3. Enter the name of the new software file on the server.

```
Source file name: <filename>
```

The exact form of the name will vary by server. However, the file location is normally relative to the FTP or TFTP directory (for example, tftpboot).

4. If required by the FTP or TFTP server, enter the appropriate username and password.
5. The switch will prompt you to confirm your request.

Once confirmed, the software will begin loading into the switch.

6. When loading is complete, use the following commands to enter Global Configuration mode to select which software image (image1 or image2) you want to run in switch memory for the next reboot:

```
Router# configure terminal  
Router(config)# boot image {image1|image2}
```

The system will then verify which image is set to be loaded at the next reset:

```
Next boot will use switch software image1 instead of image2.
```

7. Reboot the switch to run the new software:

```
Router(config)# reload
```

The system prompts you to confirm your request. Once confirmed, the switch will reboot to use the new software.

Loading Software via BBI

You can use the Browser-Based Interface to load software onto the GbESM. The software image to load can reside in one of the following locations:

- FTP server
- TFTP server
- Local computer

After you log onto the BBI, perform the following steps to load a software image:

1. Click the **Configure** context tab in the toolbar.
2. In the Navigation Window, select **System > Config/Image Control**.

The **Switch Image and Configuration Management** page appears.

3. If you are loading software from your computer (HTTP client), skip this step and go to the next. Otherwise, if you are loading software from a FTP/TFTP server, enter the server's information in the **FTP/TFTP Settings** section.
4. In the **Image Settings** section, select the image version you want to replace (**Image for Transfer**).
 - If you are loading software from a FTP/TFTP server, enter the file name and click **Get Image**.
 - If you are loading software from your computer, click **Browse**.

In the **File Upload Dialog**, select the file and click **OK**. Then click **Download via Browser**.

Once the image has loaded, the page refreshes to show the new software.

New and Updated Features

BLADEOS 6.5 for 1/10Gb Uplink Ethernet Switch Module (GbESM) has been updated to include new and enhanced features in support of IPv6.

The list of features below summarizes the updated features. For more detailed information about configuring GbESM features and capabilities, refer to the complete BLADEOS 6.5 documentation as listed on [page 3](#).



Caution—Do not upgrade directly to BLADEOS 6.5 if currently using BLADEOS 6.1 or prior. See [“Updating from BLADEOS 6.1 or Prior” on page 6](#) for appropriate upgrade procedures.

Note – vNICs are not supported simultaneously on the same switch ports as VMready, or on the same switch

SNMP Enhancements

(ID: 42203) Additions to SNMP traps and MIBs, including LACP information.

Resolved Issues

Route Display Works for Unlearned Addresses

(ID: 41386) Fixed a condition where displaying the route for a specific address did not return results if the specified address was not already learned by the switch. The `show ip route address` command now displays the best route to the target address, even when that address is not found in the current route table.

Other Corrections

The following issues have also been resolved:

- Reset due to software exception: ID 43570
- BGP: ID 41670, 42376, 43757
- Configuration: ID 43247
- Information displays: ID 42376, 43067
- LACP: ID 43067
- OSPF: ID 41670, 43333, 43570
- Ports: ID 43699
- SNMP: ID 42442, 43161, 43696
- SSH: ID 42672
- Other routing: ID 42008, 42376

See the software change log included with the software release files for details on these issues, as well as for corrections made in prior releases.

Supplemental Information

This section provides additional information about configuring and operating the GbESM and BLADEOS.

Management Module

- The “Fast POST=Disabled/Enabled” inside the IBM management module Web interface “I/O Module Admin Power/Restart” does not apply to the GbESM.

Solution: To boot with Fast or Extended POST, go to the “I/O Module Admin/Power/Restart” window. Select the GbESM, and then choose “Restart Module and Run Standard Diagnostics” or “Restart Module and Run Extended Diagnostics.”

- The following table correlates the Firmware Type listed in the IBM management module’s Web interface “Firmware VPD” window to the GbESM software version:

Table 1 Firmware Type list

Firmware Type	Description
Boot ROM	GbESM Boot code version
Main Application 1	Currently running image
Main Application 2	Backup image

- Within the IBM management module Web interface, the Java applets of “Start Telnet Session” and “Start Web Session” do not support changing of default known ports 23 and 80 respectively.

Solution: If the Telnet or HTTP port on the GbESM is changed to something other than the default port number, the user must use a separate Telnet client or Web browser that supports specifying a non-default port to start a session to the GbESM user interface.

Management Module/GbESM Connectivity

Currently, the IBM management module is designed to provide one-way control of the GbESM. As a result, the GbESM may lose connectivity to the management module via the management port under the following conditions:

- If new IP attributes are pushed from the management module to the GbESM while the IP Routing table is full, the new attributes will not be applied.
Solution: Enable “External Management over all ports,” connect to the switch using other interface and then clear the routing table. Then push the IP address from the management module. If this does not work, use Solution 2 below.
- If you execute the `/boot/reset` CLI command on the GbESM or the GbESM resets itself, the management module might not push the IP attributes to the switch, and connectivity may be lost.

Solution 1: If you should experience any connectivity issues between the switch module and the management module, go to the “I/O Module Configuration” window on the management module’s Web interface. Under the “New Static IP Configuration” section, click **Save** to trigger the management module to push the stored IP attributes to the switch module.

Solution 2: If Solution 1 does not resolve your connectivity issue, then go to the “I/O Module Admin/Power/Restart” window on the management module’s Web interface. Restart the switch module in question.

Solution 3: If this still does not resolve the issue, enable Preserve new IP configuration on all resets setting on the management module and restart the switch module via the “I/O Module Admin/Power/Restart” window on the management module’s Web interface.

Note – As a rule, always use the management module Web interface to change the GbESM management IP attributes (IP address, mask and gateway), and then click Save to push the IP attributes to the switch module. Use of the command-line interface to change the switch module management IP attributes may result in duplicated entries for the management IP Interface in the switch route table and/or loss of connectivity via the management module.

Secure Management Network

The following GbESM attributes are reserved to provide secure management access to and from the IBM management module:

- MGT1 (port 15) and MGT2 (port 16)
- VLAN 4095
- IP interface 128
- Gateway 4
- STG 128

For more information about remotely managing the GbESM through the external ports, see “Accessing the Switch” in the *BLADEOS 6.5 Application Guide*.

Note – The external uplink ports (EXTx) cannot be members of management VLANs.

Secure Shell (SSH)

Because SSH key generation is CPU intensive, the GbESM attempts to avoid unnecessary key generation. The process generates three server keys:

1. One key is generated to replace the current server key, if used.
2. A second key is generated as a spare, in case the current server key is used and the specified interval expires.
3. A third key is generated for use at the next reboot.

Therefore, if you never login via SSH, you will only see two key generation events. You may see all three events directly following a reboot. If you want to witness the key generation after the specified interval has expired, then you must login via SSH at least once during each expiration interval.

Trunk Group Configuration Tips

Please be aware of the following information when you configure trunk groups:

- Always configure trunk groups first, on both ends, before you physically connect the links.
- Configure all ports in a trunk group to the same speed (you cannot aggregate 1Gb ports with 10GBASE-SFP+ ports).

Spanning Tree Configuration Tips

To ensure proper operation with switches that use Cisco Per VLAN Spanning Tree (PVST+), you must do one of the following:

- Create a separate Spanning Tree Group for each VLAN.
- Manually add all associated VLANs into a single Spanning Tree Group.

When using Layer 2 Trunk Failover, disable Spanning Tree Protocol on external ports.

Syslog Configuration Tip

The *facility* parameter traditionally is used to correlate services (such as IP, CLI, etc.) to messages. This is done to distinguish between the different services that are running in the network/device. However, for the GbESM, there is a single configured facility value (0-7) used on all messages. By configuring a unique facility value for each switch, a single SYSLOG server can distinguish between the various GbESMs in the network. Refer to “System Host Log Configuration” in the *BLADEOS 6.5 Command Reference*.

Internal Port Autonegotiation

By default, link autonegotiation is turned on for internal ports. This is in contrast to external ports, where autonegotiation is off by default. Internal ports use autonegotiation in order to support the Wake-Over-LAN (WOL) features of some servers. If an attached server does not support autonegotiation or WOL, turn autonegotiation off for the internal port.

vCenter Synchronization

When applying distributed VM group configuration changes, the switch will attempt to synchronize settings with the VMware vCenter for virtualization management. If the vCenter is unavailable, an error message will be displayed on the switch. Be sure to evaluate all error message and take the appropriate actions to ensure the expected changes are properly applied. If corrective actions are not taken, synchronization may remain incomplete when connection with the vCenter is restored.

Solution: When the switch connection with the vCenter is restored, use the following operational command to force synchronization:

```
>> # /oper/virt/vmware/scan
```

FTP/TFTP Directory Path

When you use the CLI to perform a FTP/TFTP file transfer, you cannot use a forward slash (/) in the directory path, unless it is preceded by a back slash (\). This issue occurs only when a full command is issued on one line.

For example, the following is **invalid**:

```
# /boot/gtimg 1 10.10.10.2 image_directory/filename
```

The following is correct:

```
# /boot/gtimg 1 10.10.10.2 image_directory\  
/filename
```

The Boot Management Menu

The Boot Management menu allows you to switch the software image, reset the switch to factory defaults, or to recover from a failed software download.

You can interrupt the boot process and enter the Boot Management menu from the serial console port. When the system displays Memory Test, press <Shift B>. The Boot Management menu appears.

```
Resetting the System ...
Memory Test .....

Boot Management Menu
1 - Change booting image
2 - Change configuration block
3 - Xmodem download
4 - Exit

Please choose your menu option: 1
Current boot image is 1. Enter image to boot: 1 or 2: 2
Booting from image 2
```

The Boot Management menu allows you to perform the following actions:

- To change the booting image, press 1 and follow the screen prompts.
- To change the configuration block, press 2, and follow the screen prompts.
- To perform an Xmodem download, press 3 and follow the screen prompts.
- To exit the Boot Management menu, press 4. The booting process continues.

Recovering from a Failed Upgrade

Use the following procedure to recover from a failed software upgrade.

1. Connect a PC to the serial port of the switch.
2. Open a terminal emulator program that supports XModem Download (for example, HyperTerminal, CRT, PuTTY) and select the following serial port characteristics:
 - Speed: 9600 bps
 - Data Bits: 8
 - Stop Bits: 1
 - Parity: None
 - Flow Control: None
3. Boot the switch and access the Boot Management menu by pressing <Shift B> while the Memory Test is in progress and the dots are being displayed.
4. Select 3 for Xmodem download. When you see the following message, change the Serial Port characteristics to 115200 bps:

```
## Switch baudrate to 115200 bps and press ENTER ...
```

5. Press <Enter> to set the system into download accept mode. When the readiness meter displays (a series of "C" characters), start XModem on your terminal emulator.

6. Select the Boot Image to download. The XModem initiates the file transfer. When the download is complete, a message similar to the following is displayed:

```
yzModem - CRC mode, 62494(SOH)/0(STX)/0(CAN) packets, 6 retries
Extracting images ... Do *NOT* power cycle the switch.
**** VMLINUX ****
Un-Protected 10 sectors
Erasing Flash..... done
Writing to Flash.....done
Protected 10 sectors
**** RAMDISK ****
Un-Protected 44 sectors
Erasing Flash..... done
Writing to Flash.....done
Protected 44 sectors
**** BOOT CODE ****
Un-Protected 8 sectors
Erasing Flash..... done
Writing to Flash.....done
Protected 8 sectors
```

7. When you see the following message, change the Serial Port characteristics to 9600 bps:

```
## Switch baudrate to 9600 bps and press ESC ...
```

8. Press the Escape key (<Esc>) to re-display the Boot Management menu.
9. Select 3 to start a new XModem Download. When you see the following message, change the Serial Port characteristics to 115200 bps:

```
## Switch baudrate to 115200 bps and press ENTER ...
```

10. Press <Enter> to continue the download.
11. Select the OS Image to download. The XModem initiates the file transfer. When the download is complete, a message similar to the following is displayed:

```
yzModem - CRC mode, 27186(SOH)/0(STX)/0(CAN) packets, 6 retries  
  
Extracting images ... Do *NOT* power cycle the switch.  
  
**** Switch OS ****  
  
Please choose the Switch OS Image to upgrade [1|2|n] :
```

12. Select the image number to load the new image (1 or 2). It is recommended that you select 1. A message similar to the following is displayed:

```
Switch OS Image 1 ...  
  
Un-Protected 27 sectors  
  
Erasing Flash..... done  
  
Writing to Flash.....done  
  
Protected 27 sectors
```

13. When you see the following message, change the Serial Port characteristics to 9600 bps:

```
## Switch baudrate to 9600 bps and press ESC ...
```

14. Press the Escape key (<Esc>) to re-display the Boot Management menu.
15. Select 4 to exit and boot the new image.

Known Issues

This section describes known issues for BLADEOS 6.5 on the 1/10Gb Uplink Ethernet Switch Module.

Boot Configuration Block

In the CLI, the boot configuration command (`/boot/conf <block>`) examines only the initial character of the *block* option. Invalid *block* strings (those other than `active`, `backup`, or `factory`) that use a valid first character (a, b, or f) will be interpreted as the matching valid string. (ID: 42422)

IPv4 Gateways 5 through 132

Although the switch allows IPv4 gateways numbered 1 through 132 to be configured, the 1/10Gb Uplink ESM supports only IPv4 gateways numbered 1 to 4. IPv4 gateways 5 through 132 are not supported and should not be configured. (ID: 42433)

QoS and Trunking

When you assign an ACL (or ACL Group) to one port in a trunk, BLADEOS does not automatically assign the ACL to other ports in the trunk, and it does not prompt you to assign the ACL to other ports in the trunk.

Solution: Manually assign each ACL or ACL Group to all ports in a trunk.

RIP MIBs

Due to backward-compatibility issues, two Routing Information Protocol (RIP) MIBs are available in BLADEOS: `ripCfg` and `rip2Cfg`. Use the `rip2Cfg` MIB to configure RIPv1 and RIPv2 through SNMP.

BLADEOS does not support the standard RIPv2 MIB as described in RFC 1724. Use the `rip2Cfg` MIB to configure RIPv1 and RIPv2 through SNMP.

Trunk and Link Loop

When you create a trunk or link loop between the GbESM and another switch, packets might loop infinitely at line rate within the related links. When this problem occurs, the GbESM continuously displays the following messages at the console:

```
WARNING: packet_sent u: 0, dv_active: tx ring full
packet_sent dcnt=114, public1=110, vcnt=1025
```

Solution: Remove the loop to resolve this misconfiguration.

Browser Based Interface

- Some versions of Microsoft Internet Explorer version 6.x do not perform HTTP download efficiently. If you have one of these versions, HTTP software download might take much longer than expected (up to several minutes).
- Web-browsers from different vendors may vary in their support of standard features. If you encounter problems using the BBI in a particular browser, a different browser may resolve the issue.

Active MultiPath Protocol

For proper AMP operation, all access switches should be configured with a higher priority value (lower precedence) than the aggregators. Otherwise, unexpected AMP keep-alive packets may be forwarded from one aggregator switch to the other, even when its AMP group is disabled.

(ID: 37310)

Access Control Lists

- When an Access Control List (ACL) is installed on two different ports, only one statistics counter will be available. The GbESM does not support two different statistics counter for one ACL installed on two different ports.
- The ACL filters for TCP/UDP work properly only on packets that do not have IP options.
- When configuring an ACL to set 802.1p priority for in-profile packets, and updating the DSCP field using TOS bits for out-of-profile packets, the out-of-profile packets will have also the 802.1p priority set as defined in the in-profile setting.
- Although the management port can be configured for port filtering option, actual port filtering will not occur, because the system filters out the management VLAN.

IGMP Relay

- When having joins from multiple VLANs, and the multicast data transmitter is on a VLAN that did not receive any joins, multicast data is routed only if the flood option is disabled using the `/cfg/13/igmp/adv/flood d` command.
- If an IGMP v2 joins an IGMP group on the same port where an IGMP v1 join has already been issued, the software will default to the IGMP v1 timeout value.

Link Aggregation Control Protocol

If a static trunk on a GbESM is connected to another GbESM with LACP configured (but no active LACP trunk), the `/info/12/trunk` command might erroneously report the static trunk as forwarding.

Since LACP trunks use LACPDU packet to maintain trunking with the partner, there is a possibility for those packets to be dropped from an extremely busy trunk. If this happens, some links in the LACP trunk might be removed, then aggregated back to the trunk if an LACPDU is received. To avoid this unstable LACP trunk link, you can add more links to the trunk to increase the bandwidth, or use regular static trunk if there are no more links available.

Static Mrouter

If a port has a static multicast router (Mrouter) configured, and you move the port to a different VLAN, the static Mrouter appears in the `/info/13/igmp/mrouter/dump` output for the original VLAN.

Solution: When you move the port to a new VLAN, remove the static Mrouter from the port, and add it again.

QoS Metering

Traffic may exceed the configured maximum burst size of the ACL meter (`/cfg/port <x>/aclqos/meter/mbsize`) by one packet, with that packet remaining In-Profile. Once the ACL meter has been exceeded, additional burst packets fall Out-of-Profile.

VMready

The GbESM does not support IPv6 on VMs. If a VM attached to the switch is using IPv6 addressing, the output of VM-related information commands (such as `/info/virt/vm/vmware/showvm <IPv6 address>`) will be incorrect. (ID: 42876)

Linking at 10/100Mb

When the link speed for an external connection is forced (i.e. no Auto-Negotiation) to 100 Mbps and then changed to 10 Mbps, if the external device is changed first, the external device may erroneously report the link as DOWN even after the GbESM is changed to 10 Mbps.

Solution: At the external device, disconnect and reconnect the cable.

Daylight Saving Time

For the Asia/Israel time zone, BLADEOS sets the end of Daylight Saving Time (DST) as the last week in September. However, because the observed end of DST varies according to the date of the Yom Kippur holiday in the Hebrew calendar since 2005, occurring on various Saturdays in September or October, the default DST rule may not work as desired.

For the Asia/Israel time zone, or any other time zone in which the start or end date of DST varies from year to year, the administrator should create a custom DST rule for those years in which DST is desired, but ends in a different week than the set by default.

Daylight Saving Time

For the Asia/Israel time zone, BLADEOS sets the end of Daylight Saving Time (DST) as the last week in September. However, because the observed end of DST varies according to the date of the Yom Kippur holiday in the Hebrew calendar since 2005, occurring on various Saturdays in September or October, the default DST rule may not work as desired.

Interoperability with Older Hubs

The command-line interface might display link up and link down messages continuously for an external port that is connected to certain older hub models configured for 100 Mbps half-duplex. The display might show link up erroneously. This behavior has been observed when connecting the GbESM with the following devices:

- NETGEAR FE104 100 hub
- SBS 1000Base-T NIC
- 3Com Linkbuilder FMS100 Hub 3C250 TX/I
- 3Com SuperStack II 100TX 3C250C-TX-24/12
- Nortel Baystack 204 Hub

If the GbESM is connected to an Alteon Application Switch which requires a link speed of 100 Mbps half-duplex, then enable auto negotiation on the GbESM port with port speed=any, mode=any, fctl=both, and auto=on.

RADIUS with SSHv2

With RADIUS turned on, users might see a duplicate login prompt for SSHv2 clients, if the RADIUS server is too slow to respond or if the RADIUS server is not available. In this case, users must re-type the username and password to login.

Trunk Traffic

Multicast, broadcast and DLF (Destination Lookup Failure, which are unknown destination MAC packets) traffic is sent to the lowest numbered port in the trunk. If this port is down, then the traffic is sent to the next lowest-numbered port. If the port that was down comes up again, the traffic is not re-hashed back to the recovered port.

Strong Password Expiration

If you configure a Strong Password with automatic expiration, the password might not expire if the system date and time is not configured first. Use of a Network Time Protocol (NTP) server resolves this issue.

Solution: When you configure a strong password with automatic expiration, first configure the system time and date for the switch.

